


1. Assembly Drawing (CD-5/9(HT))

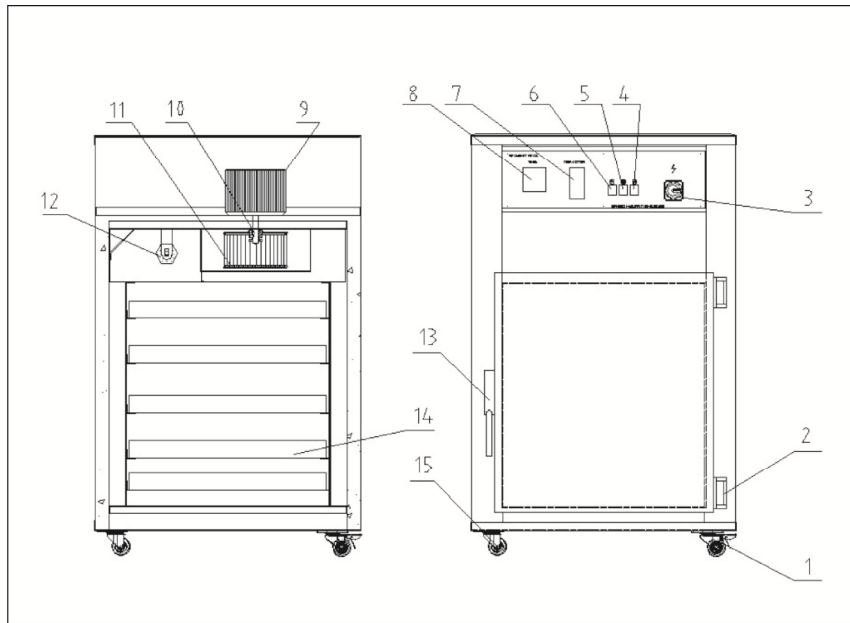

Remarks: Please refer to material list 2 for specific explanation of the Arabic numbers in parts drawing.


2. Parts List (CD-5/9(HT))

No.	Name	Part No.		
		CD-5-(HT)(50Hz/60Hz)	CD-9(50Hz/60Hz)	CD-9-HT(50Hz/60Hz)
1	3" mobile castor	YW03000300000	YW03000300000	YW03000300000
2	Oven door back button	BW09000200100	BW09000200100	BW09000200100
3	Main power switch	YE10021160000	YE10021160000	YE10021160000
4	Motor switch	YE10210400000	YE10210400000	YE10210400000
5	Heater switch	YE10210400000	YE10210400000	YE10210400000
6	Timer switch	YE10220600000	YE10220600000	YE10220600000
7	Temperature controller	YE80002200800	YE80002200800	YE80002200800
8	Timer	YE86002400000	YE86002400000	YE86002400000
9	Motor	50Hz:YM10271100000	50Hz:YM10271100000	YM10271200000
		60Hz:YM10271200000	60Hz:YM10271200000	
10	Motor longer shaft	BH11053800010	BH11053800010	BH11053800010
11	Motor blade	50Hz:YW09007500100	50Hz:YW09007500100	50Hz:YW09945140000
		60Hz:YW09000701100	60Hz:YW09000701100	60Hz:YW09000701100
12	Heating wire*	BH700504000050	BH700945000050	BH700945000050
13	Direct door lock	YW00000000000	YW00000000000	YW00000000000
14	Support plate	-	-	-
15	3" movable castors	YW03000300200	YW03000300200	YW03000300200

* means possible broken parts. ** means easy broken part. and spare backup is suggested.

Please confirm the version of manual before placing the purchase order to guarantee that the item number of the spare part is in accordance with the real object.

3. Assembly Drawing (CD-20/20L(HT))

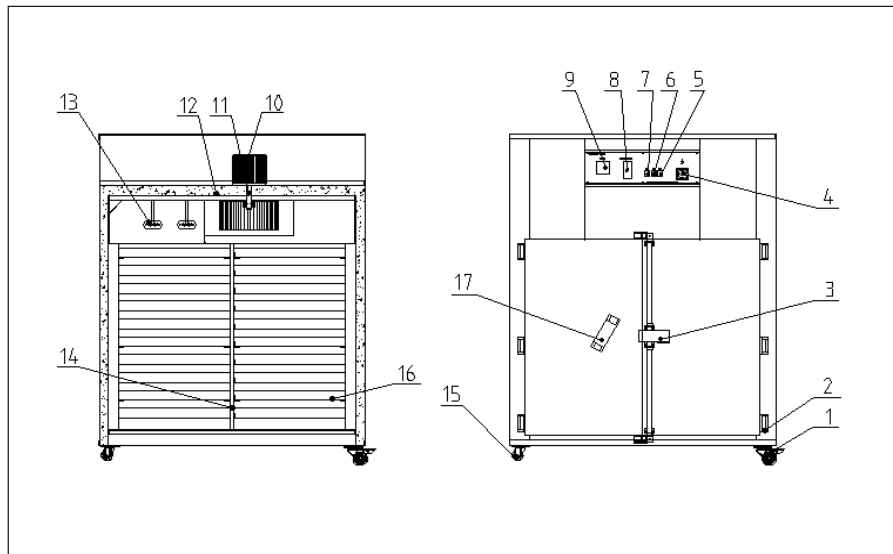

Remarks: Please refer to material list 4 for specific explanation of the Arabic numbers in parts drawing.

4. Parts List (CD-20/20L (HT))

No.	Name	Part No.	
		CD-20-(HT)	CD-20L-(HT)
1	3" mobile castor	YW03000300000	YW03000300000
2	Oven door back button	BW09000200100	BW09000200100
3	Mechanical door handle	-	-
4	Main power switch	YE10323200000	YE10323200000
5	Motor switch	YE10210400000	YE10210400000
6	Heater switch	YE10210400000	YE10210400000
7	Timer switch	YE10210600000	YE10210600000
8	Temperature controller	YE80002200800	YE80002200800
9	Timer	YE86002400000	YE86002400000
10	Motor	YM10290400000	YM10290400000
11	Motor longer shaft	BH11203600010	BH11203600010
12	Motor blade	YW09001200400	YW09001200400
13	Heating wire*	BH70094500050	BH70094500050
14	Middle bracket	-	-
15	3" movable castors	YW03000300200	YW03000300200
16	Support plate	-	-
17	Oven handle	YW09000300200	YW09000300200

* means possible broken parts. ** means easy broken part. and spare backup is suggested.

Please confirm the version of manual before placing the purchase order to guarantee that the item number of the spare part is in accordance with the real object.